# **PHILIPS** Let's make things better.

**Model 36PT41B1 Color Television and Remote Control** 

# QUICK USE AND INSTALLATION GUIDE

### TABLE OF CONTENTS

Getting Started	
Warning/Precautions	1
Hooking Up Your TV	1
Basic TV and Remote Control Operation	2
How to Use the Install Controls	3–4
Using the Language Control	3
Setting the Tuner Mode	3
Setting the TV to Auto Program Channels	3
Using the Channel Edit Control	4
Setting the Channel Name Control	4
How to use the AutoChron <sup>TM</sup> control	4
1	

Connect the cable TV cable to the

ANTENNA/CABLE plug on the TV.

For details on product registration, warranty, and service, refer to the other literature included with your TV information packet.

Please retain all these materials and keep them handy for future reference.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

NOTE: This Quick Use Guide may be used with other models. Some of the features listed may or may not apply to your TV.

### CABLE T

### CABLE INPUT/CONVERTER

**V**our Cable TV input into **I** your home may be a single (75 ohm) cable or a converter box installation. In either case, the connection to the TV is very easy. Just put the threaded end of the cable signal to the TV's antenna plug and screw it down tightly.

> NOTE: The connecting cable for the converter is supplied by the cable TV company.

If your Cable TV signal is a single, round cable (75 ohm), then you're ready to

connect to the TV. If you have a cable converter box, connect the cable TV signal

Cable TV Company

to the cable signal IN(put) plug on the converter.

If you have a cable converter box, connect the OUT(put) plug from the converter to the  $75\Omega$  (ohm) plug on the ANT 75Ω Cable TV Signal Input Back of TV

# HELP

Remember to set the TV for the type signal to which you've just connected (see the "Tuner" section on page 3).

To select only the channel numbers on your cable system, see "Auto Program" (page 3). If you use a cable converter box, set the TV to the same channel as the converter's CH 3/4 switch (on the back of the converter).

### ANTENNA

### **COMBINATION UHF/VHF**

combination antenna  $oldsymbol{A}$ receives normal broadcast channels (VHF 2-13 and UHF 14–69). Your connection is easy because there is only one  $75\Omega$ (ohm) antenna plug on the back of your TV, and that's where the antenna goes.

### **BEGIN**


1 If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the TV.


Cable TV Converter **Box Connection** 

If your antenna has flat, twinlead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300- to 75-ohm adapter.

Push the round end of the adapter (or antenna) onto the  $75\Omega$  (ohm) plug on the back of the TV. If the round end of the antenna wire is threaded, screw it down tightly.

Round Cable 75Ω (Ohm)

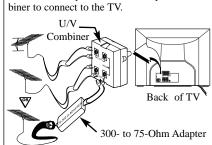

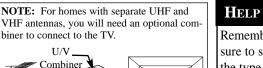


**SMART** 

Remember, be sure to set the TV for the type of signal to which you've connected (see the "Tuner" section on page 3).

To set the TV to select only the channel numbers in your area, see how to "Program" or "Add" channels in memory on page 3 ("Auto Program" section).

Contact your dealer, or call our Parts Information Center at 1-800-851-8885 to order the following accessories:


- $300\Omega$  (ohm) to  $75\Omega$
- Combination VHF/UHF antenna.

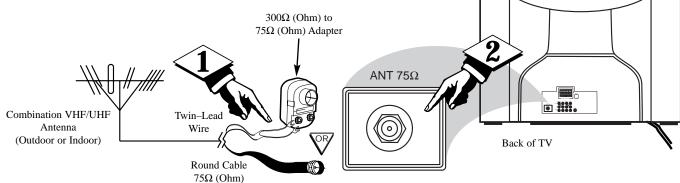

## TV to VCR

### **BASIC CONNECTION**

Follow the steps to the right to connect a basic antenna or cable TV signal to a VCR, and then the VCR to the TV. For information on other hookups (possible when cable/descrambler boxes are included), refer to the owner's manuals for the VCR and the cable converter.

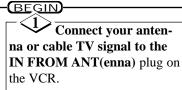


**2** Connect the OUT TO TV plug on the VCR to the **75** $\Omega$  (**ohm**) plug on the TV (connecting cable supplied with the VCR).

VCR


1

Refer to the owner's manual included with your VCR for other possible connections and TV/VCR operating details.

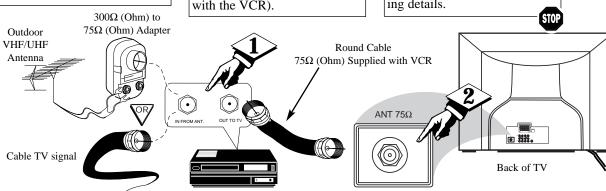

3135 015 17771

# TV AND REMOTE CONTROL OPERATION

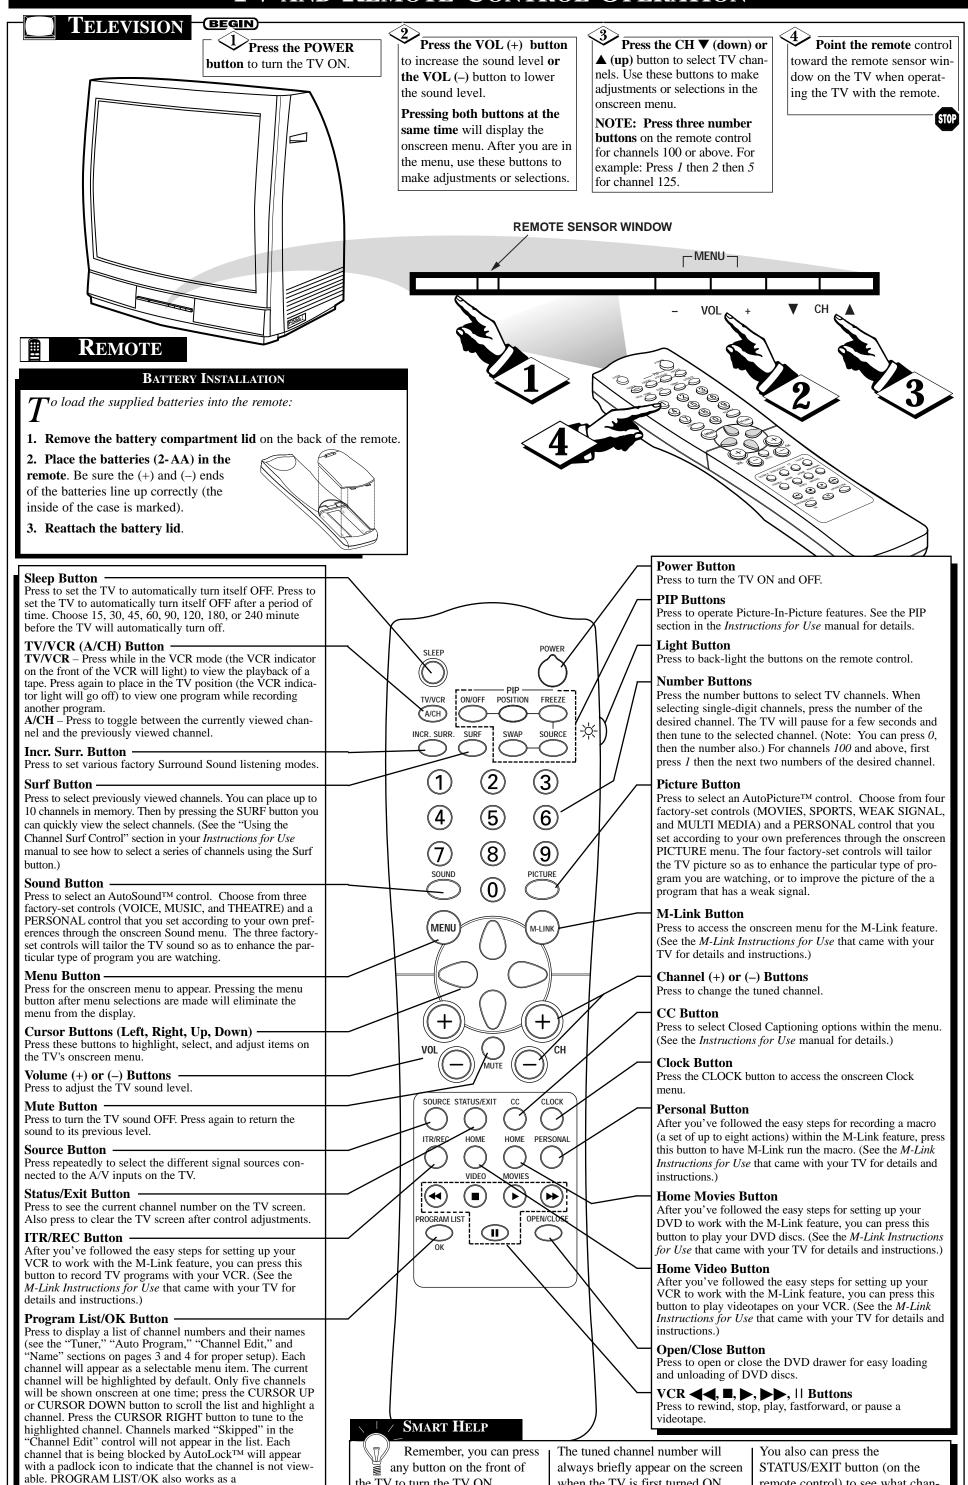

when the TV is first turned ON

(and when the channel is changed).


remote control) to see what chan-


nel the TV is on.


the TV to turn the TV ON.

confirmation/select button for VCR use.

# How to Use the Installation Features

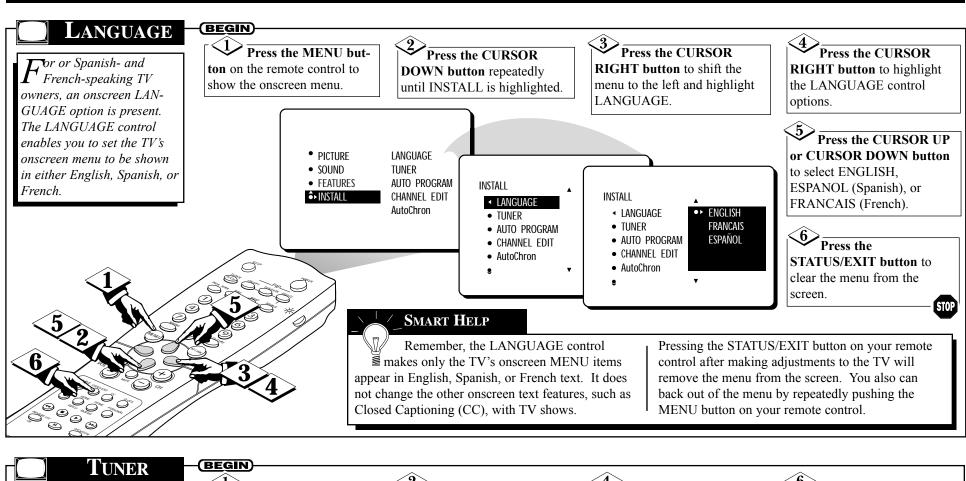

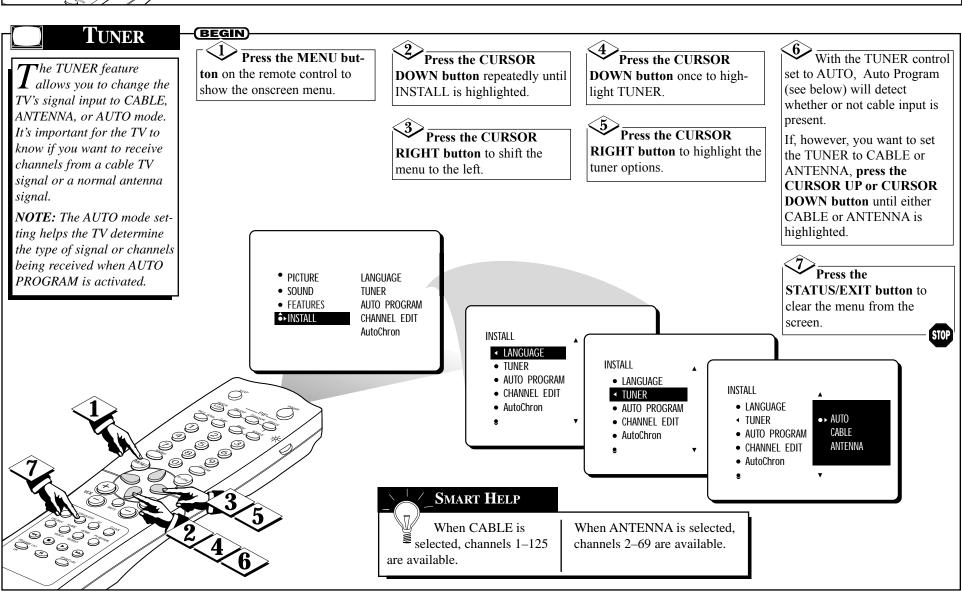

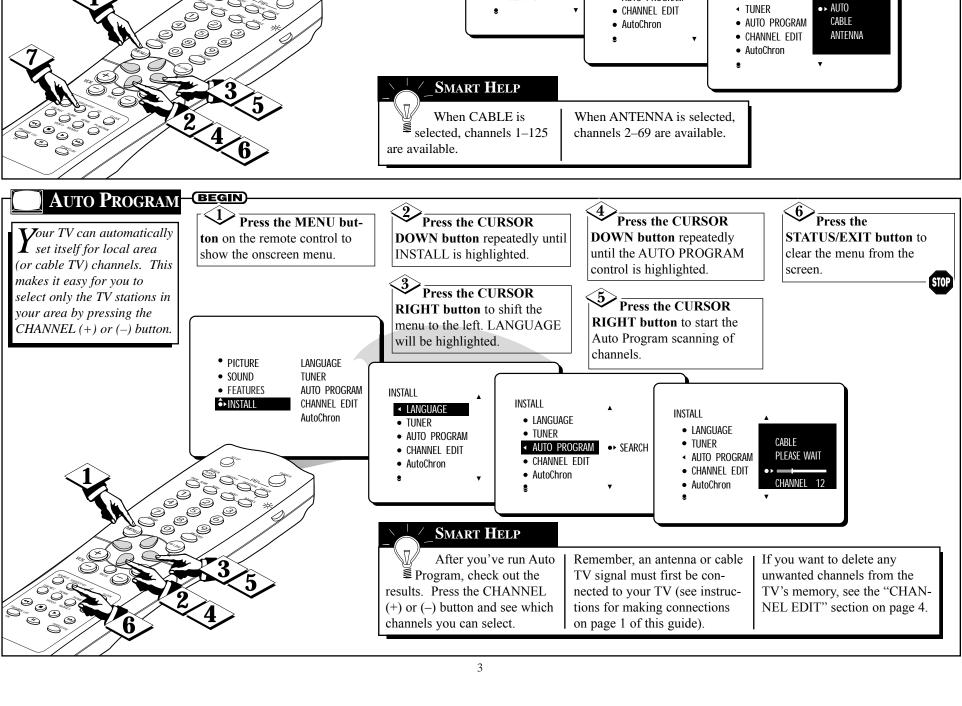

# How to Use the INSTALLATION FEATURES

